

Figure 1 – Lever Model

Instruction SP-Type054-1NF



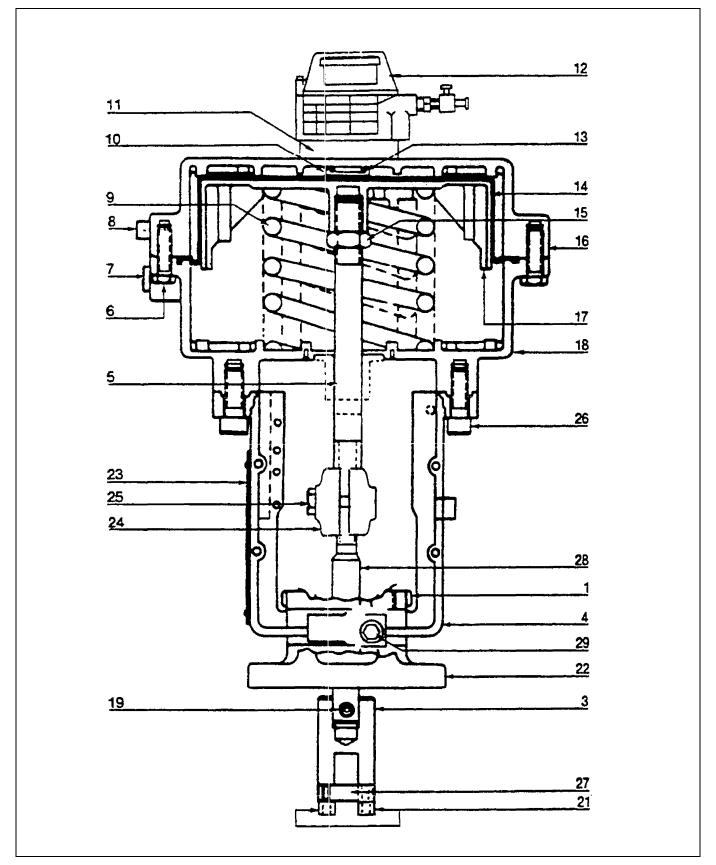


Figure 2 – Thrust Model

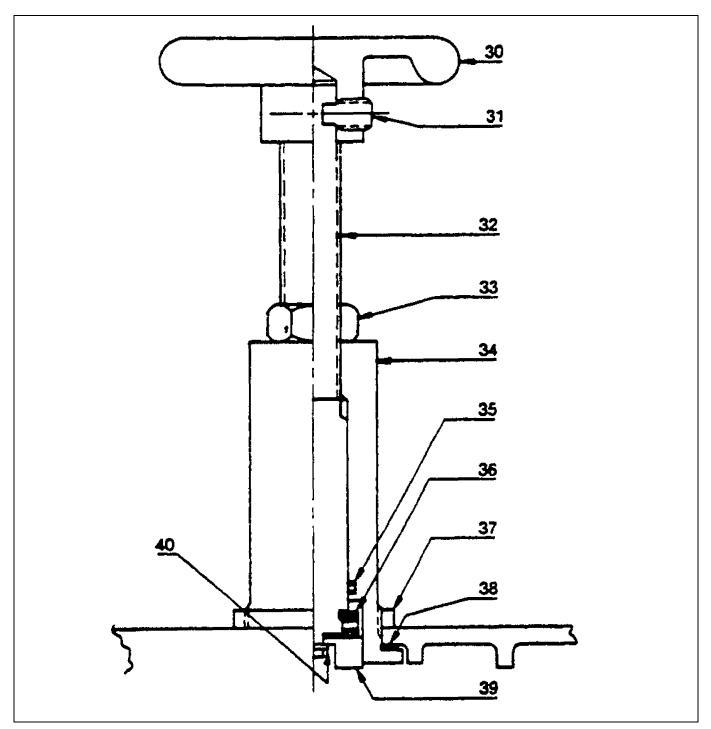
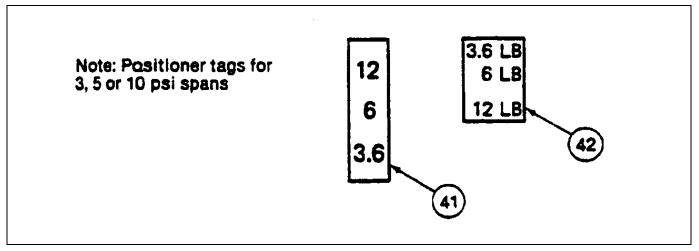


Figure 3 – Top Mounted Handwheel





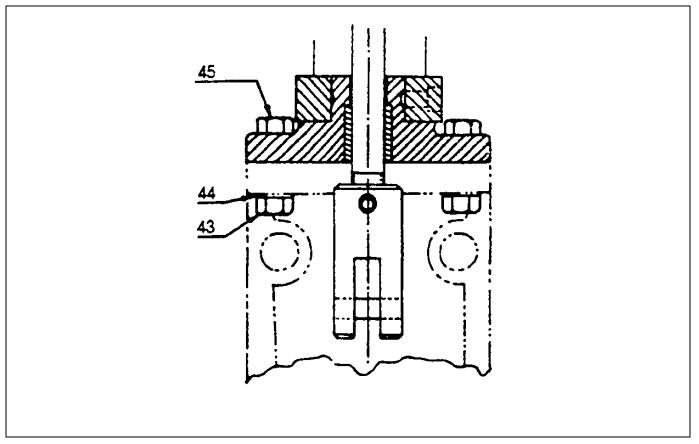


Figure 5 – Wall Mounting Kit

4

Key No	Part Number	Description			Qty		
1	30036962-392	Locknut				1	
2	30046501-285	Pin (lever models)					
3		Clevis					
	30067601-193	Lever Type					
	30049034-193	Thrust Type					
4		Yoke					
	30067435-460	Lever Type					
	30067434-460	Thrust Type					
5	30067437-193	Actuator Stem				1 6	
6	30020167-264	Screw, Diaphragm Case					
7	30067457-188	Сар					
8	30066636-322	Pipe Plug					
		Actuator Spring					
9		Range (psi)					
		3-15 30067376-279		-13 381-279	7-18 30067381-279 & 30684341-001	1	
10	30067447-430	Spring Seat – Gradutrol Positioner				1	
11	30067444-196	O-ring					
12	30067446-450	Gradutrol Positioner					
		Spring – Gradutrol Positioner					
13		PSI Span					
10		3, 6, 6, 123, 5, 1030049408-12230068857-122		- 1			
4.4	00007400 000	30049408-122		3	1		
14	30067438-890	Diaphragm – Neoprene					
15	30020134-264	Locknut					
16	20007400 400	Upper Diaphragm Case					
	30067428-460	W/O Gradutrol Positioner or TMH					
17	30067429-460 30067432-460					1	
18	30067432-460	Diaphragm Plate Lower Diaphragm Case				1	
19	30028081-264					1	
20	30028081-204	Set Screw Lower Subassembly – includes Hub 20-B, Bearing 20-C, & Lever					
20	30040317-001	20-A					
20-A	30046505-001	Lever				1	
20-B	30046503-266	Hub				1	
20-C	30046498-450	Bearing				4	
21	30020236-264	Set Screw				2	
		Mounting Bracket					
22	30046506-200	Lever Type				1	
	30049384-000	Thrust Type					
23	30064967-457	Nameplate				1	
24	30069251-749	Stem Clamp				1	

Key No	Part Number	Description	Qty
25	30008104-264	Screw	2
26	30067474-264	Screw – Yoke	2
27	30046502-285	Pin	1
28	30672965-001	Stem Extension	1
29	30029105-264	Screw	1
30	30067450-750	Handwheel	1
31	30067455-264	Screw	1
32	30067448-107	Manual Operator Stem	1
33	30045928-322	Nut	1
34	30067451-193	Housing	1
35	30067440-196	O-ring	1
36	30067452-450	Bearing	1
37	30067456-412	Nut	1
38	30067441-196	O-ring	1
39	30067453-193	Stem Head	1
40	30067454-264	Snap Ring	1
41	30064647-458	Tag – start point – (supplied with Gradutrol Positioner)	1
42	30064648-458	Tag – range adjuster – (supplied with Gradutrol Positioner)	1
43	30020234-264	Nut	4
44	30020456-026	Washer	4
45	30026201-264	Screw	4
46	30049037-200	Mounting Bracket for Wall Mounting	1

6

Guarantee

Products, auxiliaries and parts thereof, of Nor'East Controls' manufacture, are guaranteed for a period of one year from the date of shipment against defective workmanship and material only, when properly installed, operated and serviced in accordance with Nor'East Controls' recommendations. Replacement for items of Nor'East Controls' manufacture will be made free of charge if proved to be defective within such time. No claim for special or consequential damages, transportation, or labor shall be allowed. Purchaser shall be solely responsible for determining suitability for use and in no event shall Nor'East Controls be liable in this respect. Equipment or parts manufactured by others but furnished by Nor'East Controls will be repaired or replaced, only to the extent provided in the original manufacturer's warranty to Nor'East Controls. Nor'East Controls does not guarantee resistance to corrosion, erosion, abrasion or other sources of failure, nor does Nor'East Controls guarantee a minimum length of service. Failure of the purchaser to give prompt written notice of any alleged defect under this guarantee forthwith upon its discovery, or use and possession thereof after an attempt has been made and completed by someone other than Nor'East Controls or an authorized representative to remedy defects therein, or failure to return products or parts for replacement as herein provided, of failure to install, operate, and maintain said products or parts according to instructions provided by Nor'East Controls, of failure to pay the entire contract price when due, shall be a waiver of all rights under these representations.

The foregoing guarantee shall be null and void, if, after shipment from our factory, the item is modified in any way or component of another manufacturer, such as but not limited to; an actuator is attached to the item by valves & controls other than a Nor'East Controls Factory Service Personnel. All orders accepted shall be deemed accepted subject to this guarantee, which shall be exclusive of any other previous guarantee, and this shall be the only effective guarantee or warranty binding on Nor'East Controls, anything to the contrary contained in the purchase order, or represented by any agent or employee of Nor'East Controls, in writing or otherwise, notwithstanding, including but not limited to implied warranties.

THE FOREGOING OBLIGATIONS ARE IN LIEU OF ALL OTHER OBLIGATIONS AND LIABILITIES INCLUDING WARRANTIES OF FITNESS OR MERCHANTABILITY OR OTHERWISE, EXPRESSED OR IMPLIED IN FACT OR BY LAW, AND STATE NOR'EAST CONTROLS AND EXCLUSIVE LIABILITY AND PURCHASER'S EXCLUSIVE REMEDY FOR ANY CLAIM IN CONNECTION WITH THIS SALE OR FURNISHING OF SERVICES, GOODS, OR PARTS, THEIR OWN DESIGN, SUITABILITY FOR USE, INSTALLATION OR OPERATION.

Limitation of Liability

In no event shall Nor'East Controls be liable for any direct, indirect, special or consequential damages whatsoever, and Nor'East Controls' liability, under no circumstances, will exceed the contract price for the goods and/or services for which liability is claimed. Any action for breach of contract must be commenced within 1 year after the cause of the action has occurred.

1000 Riverside Street, Portland, Maine 04103 Ph: 207-210-6633 Fax: 207-210-6634

Sales and Service

Nor' East Controls representatives are located in major cities throughout the world. For the name of the representative nearest you, contact:

 Web site:
 www.allagashinternational.com
 E-Mail:
 sales@allagashinternational.com

Nor' East reserves the right to incorporate our latest design and material changes without notice or obligation. Design features, materials of construction and dimensional data, as described in this bulletin, are provided for your information only and should not be relied upon unless confirmed in writing by Nor' East Controls. Certified drawings are available upon request.